Qmadix™

Tempered Tech-Armor

Instruction Manual

OVERVIEW

Read instruction manual before starting installation.

Pack Includes:

Tempered Tech-Armor for front of device

Protective Tech-Armor for back of device

Dust Removers

Home Button Stickers

Cleaning Set

Micro-fiber Cloth

Assist Stick

*For different brands and models of phones, the component parts will be different.

1. Before installation, make sure all components are included in the package as follows:
   - 1 Tempered Tech-Armor front screen protector
   - 1 Protective Tech-Armor rear film overlay
   - 1 Cleaning Set (micro-fiber cloth and dust remover)
   - 3 Home Button Stickers
2. Tempered Tech-Armor is for the front screen and the Protective Tech-Armor is for the back of the device. Ensure the components for each is correct before starting.
3. The following instructions must be followed in order to achieve successful installation.

INSTALLATION INSTRUCTIONS

Installation Instructions for Tempered Tech-Armor:

Pre-Installation Cleansing Steps

1. Wash your hands thoroughly before installation.
2. Clean the device thoroughly using the Micro-fiber cloth.

List of Components

Tempered Tech-Armor front screen protector is designed slightly smaller than the actual screen so that it can be used with a case or other accessories.

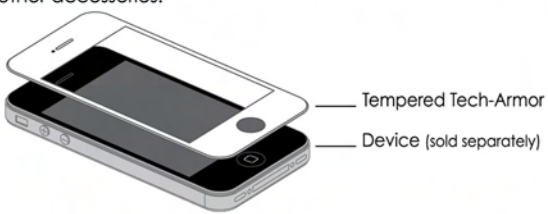

Preparation for Installation of Tempered Tech-Armor

1. Remove the tear-off sheet from the back of the Tech-Armor (adhesive side) before installing it onto the screen of the device by utilizing the tab.
2. The front tear-off sheet can be removed once installation is complete.

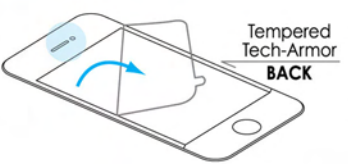

Installation & Finishing

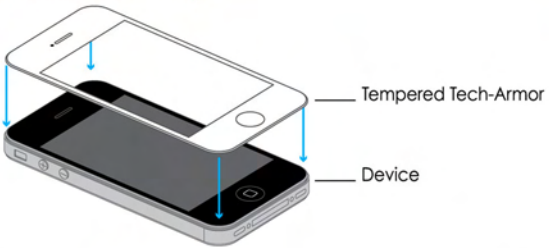

1. Ensure dirt does not get onto the Tech-Armor as this will affect the installation.
2. Carefully align and place the Tech-Armor onto the device, ensuring that the speaker and home button are not covered before placing onto the device.
3. Tempered glass ensures no air bubbles during installation.
4. After finishing installation, wipe the screen with the Micro-fiber cloth.

READ AFTER INSTALLATION

In the event that the film is damaged during the installation process, repair or replacement is not guaranteed.

Tempered Tech-Armor can be used with most Qmadix pouches, flex gels, or snap-on covers.

Qmadix will not be held responsible for any damages caused to devices due to not following the instructions listed in the Tempered Tech-Armor Instruction Manual.

Installation Instructions for Protective Tech-Armor:

List of Components

The front and back tear-off sheets of the Protective Tech-Armor will need to be removed during the installation process.

*Each Protective Tech-Armor will vary depending on the device it is made for.

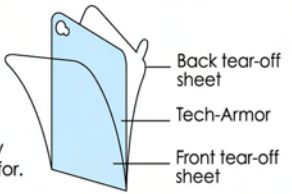

Preparation for Installation of Protective Tech-Armor

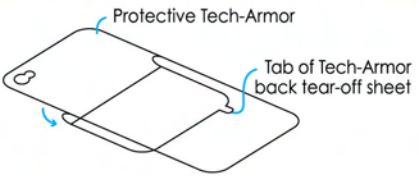

1. Holding the tab of the tear-off sheet on the back of the Tech-Armor, peel 1/3 off (see above picture).
2. Front tear-off sheet can be removed once installation is complete.

Alignment & Installation

1. Ensure dirt does not get onto the Protective Tech-Armor as this will affect the installation.
2. Starting from the top of the device, align the camera and edges of the Tech-Armor with the device before attaching it.
3. Peel off the rest of the tear-off sheet, allowing the Tech-Armor to adhere to the device.
4. While slowly peeling away the remainder of the sheet, gently press down onto the Tech-Armor film overlay.

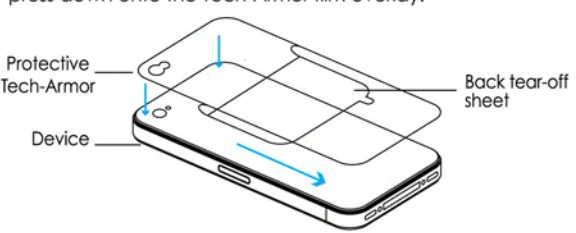

Finishing

Using the Assist Stick or Micro-fiber cloth, pressing down, stroke the Protective Tech-Armor from the center outwards.

Tip: To achieve best results, cover the Assist Stick with the Micro-fiber cloth and repeat the process.

OPTIONAL HOME BUTTON STICKER

Tempered Tech-Armor has 3 Home Button Stickers for optional use.

1. Be sure Tempered Tech-Armor front tear-off sheet has been removed.
2. Select one sticker and attach to home button on the device.

DUST REMOVER

Use the dust remover sticker to remove dirt and dust that sticks onto the Tempered Tech-Armor or between the Tempered Tech-Armor and device.

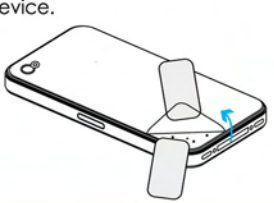

Limited Warranty

This Qmadix™ product comes with a warranty effective for ninety days starting on the date of the original purchase. This warranty does not cover damages resulting from accident, misuse, abuse, tampering, or modification. In no event will Qmadix™ be liable for damages in excess of purchase price. See www.qmadix.com for additional information.

Made in Korea 0412 **www.qmadix.com**

Qmadix™ Inc., Panorama City, CA 91402